

The Phone Layout

Handset



Base



Key Functions

	Press to enter # or to switch between upper case and lower case letters in the English mode.
	Press and hold to turn on or off the keypad lock function.
	Select keys: Press to perform the function listed above the key.
	Press to turn on the phone. If you press and hold, the phone turns off. While navigating through menus, briefly press it to cancel your input and return to the main screen. During a call, briefly press it to end the call.
	Press to place and answer landline calls.
	Press to place and answer Galaxy calls.
	Press to activate the speakerphone for handsfree operation during a call.
	Press to scroll up or down when browsing menus. In standby mode: Left: Press to place an internal call. Right: Press to review outgoing calls list. Up: Press to view incoming calls list. Down: Press to review contacts.
	During use: Up: Increases earpiece volume. Down: Decreases earpiece volume.

Charging

DECT Phone & Galaxy

Before initial operation, fully charge the DECT phone for 15 hours or more.



To charge the DECT phone or Galaxy, simply place it on the base.

Notes:

- When charging, the bars in scroll.
- Hold the base and then pull out the Galaxy after the charging.

Turning On or Off the Phone

When you place the handset (DECT phone) on the base, it automatically turns on.

To turn on the handset (when it's off), press .

To turn off the handset, press until "Goodbye!" appears.

Note:

- Nothing appears on the screen when the battery power is very low. Fully charge the handset before use.


Bluetooth

Pairing with a Galaxy

Turn on the Bluetooth feature of your Galaxy. Click button, **Settings, Wireless and network, Bluetooth settings** and **Bluetooth**. Then the Galaxy searches for available devices.

	Open the menu.
And ,	Select the Bluetooth menu.
	Open the menu.
And ,	Select the Bluetooth menu.
,	The LCD shows Please wait... , and the Bluetooth LED flashes.

When the Galaxy finds G-700, click **Pair with this device** to connect it with the base. When the Galaxy is successfully connected, **Connected to phone audio** appears.


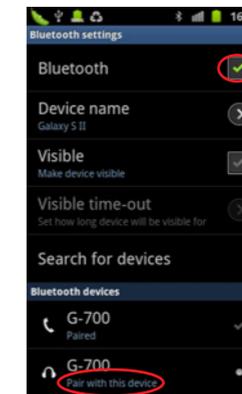


Green tick indicates Bluetooth is ON

Disconnecting a Galaxy

	Open the menu.
And ,	Select the Bluetooth menu.
,	The display shows all devices that have been paired before.
And ,	Choose the desired device.
,	
,	Press beneath Select to choose Disconnect .


When the Galaxy is disconnected, **Paired** appears below **G-700** on the Galaxy screen.

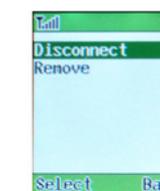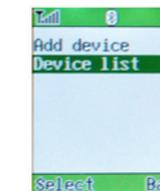

Connecting a Galaxy

Method 1: Using the Galaxy

Click button, **Settings**, **Wireless and network**, **Bluetooth settings**. If the Bluetooth feature is off, click **Bluetooth** to switch it on. Then click **Paired** below **G-700**.

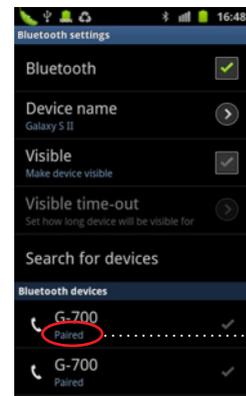

Method 2: Using the DECT Phone Menu

- Menu** Open the menu.

- And , Select the **Bluetooth** menu.

- Select**

- The display shows all devices that have been paired before.


- , **Select**

- And , Choose the desired device.

- , **Select**

- Select** **Connect** Press beneath **Select** to choose **Connect**.

When the connection is successful, **Connected to phone audio** appears below **G-700** on the Galaxy screen.

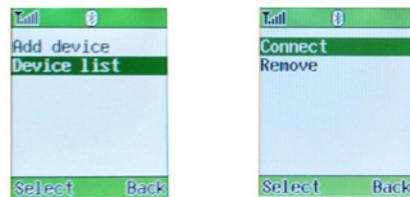

Method 3: Quick Connection

- Press on the DECT phone.

- And , Choose the desired device.

- , **Select**

When the connection is successful, **Connected to phone audio** appears below **G-700** on the Galaxy screen.

Removing a Paired Galaxy

On the DECT phone...

- Menu** Open the menu.

- And , Select the **Bluetooth** menu.

- Select**

- The display shows all devices that have been paired before.

- , **Select**

- And , Choose the device that you want to remove.

- , **Select**


- The display shows **Remove ? Galaxy S II**.

- , **Select**

- Select** A confirm tone occurs.

On the Galaxy...

Delete the DECT Bluetooth information. Press and hold **G-700**, then click **Unpair** or **Disconnect and unpair**.

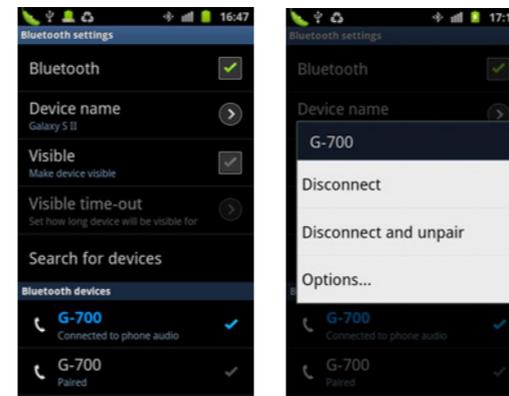

Menu Structure

